

Contents

KGT-0407

1 Base Section

Base..... 1-1

2 Cover Section

Top Cover..... 2-1

Base Cover 2-2

3 Moving-axis Section

X-axis 3-1

Y-axis-1 3-2

Y-axis-2 3-3

YT-axis 3-4

4 Feeder Holder Section

Feeder Holder 20..... 4-1

5 Head Section

Head (Nor) 5-1

Head (FNC) 5-2

Head Combination 5-3

6 Nozzle Selection

Nozzle Selection 6-1

7 Multi Camera Section

Multi Camera & Light 7-1

8 Operation Panel Section

Operation Panel Sel. 8-1

9 Conveyor Unit Section

Push Up (New) 9-1

(Old) 9-1

PCB Stopper 9-2

Side Clamp Pos. Assy 9-3

Fixed Conveyor Ent./Exit 9-4

Moving Conveyor-1 (New) 9-5

(Old) 9-5

Moving Conveyor-2 (New) 9-6

(Old) 9-6

10 Controller Section

Control Box 10-1

11 Exterior, etc Section

Exterior, etc 11-1

Key Board & Mouse 11-2