

YV100II

*Full Vision Surface Mounter
Second Version*

PARTS LIST

Contents

KM8-9910

1	Base Section	
	<i>Base</i>	1-1
2	Cover Section	
	<i>Top Cover</i>	2-1
	<i>Base Cover</i>	2-2
3	Feeder Section	
	<i>Feeder Holder E</i>	3-1
	<i>Feeder Holder C</i>	3-2
	<i>Feeder Floating Detection (Front)</i>	3-3
	<i>Feeder Floating Detection (Rear)</i>	3-4
4	Moving-axis Section	
	<i>X-Axis</i>	4-1
	<i>Y-Axis</i>	4-2
	<i>W-Axis</i>	4-3
	<i>Auto Width Conveyor (Option)</i>	4-4
	<i>Manual Width Conveyor (Standard)</i>	4-5
5	Head Section	
	<i>Head Combination</i>	5-1
	<i>Body Head</i>	5-2
6	Nozzle Section	
	<i>Nozzle Selection</i>	6-1
	<i>Nozzle Changer</i>	6-2
7	Conveyor Unit Section	
	<i>Push-Up</i>	7-1
	<i>Locate-Pin</i>	7-2
	<i>Main Stopper</i>	7-3
	<i>Sub Stopper</i>	7-4
	<i>Push In</i>	7-5
	<i>Edge Clamp</i>	7-6
8	Recognition Equipment Section	
	<i>Moving Camera</i>	8-1
	<i>Multi Vision Camera</i>	8-2
	<i>Single Vision Camera</i>	8-3
9	Exterior, etc. Section	
	<i>Monitor, etc.</i>	9-1
	<i>Monitor B/K</i>	9-2
	<i>Manual Tray Feeder</i>	9-3

10 Control Section

<i>Control Box</i>	10-1
<i>Controller Cable</i>	10-2
<i>I/O Board, etc.</i>	10-3