

# Contents

KGB 0505

## 1 Base Section

*Base* ..... 1-1

## 2 Cover Section

*Top Cover* ..... 2-1

*Base Cover* ..... 2-2

## 3 Feeder Section

*Feeder Holder E* ..... 3-1

*Feeder Holder H* ..... 3-2

*Feeder Holder B* ..... 3-3

## 4 Moving-axis Section

*X Axis* ..... 4-1

*Y Axis* ..... 4-2

## 5 Head Section

*Head (Nor)* ..... 5-1

*Head (FNC)* ..... 5-2

*Head Combination* ..... 5-3

## 6 Nozzle Section

*Nozzle Changer (Nor)* ..... 6-1

*Nozzle Changer (FNC)* ..... 6-2

## 7

## Nozzle Section

*Nozzle Selection (Nor)* ..... 7-1

*Nozzle Selection (FNC)* ..... 7-2

## 8

## Conveyor Unit Section

*Push-in* ..... 8-1

*Push-up* ..... 8-2

*Locate-pin* ..... 8-3

*Stopper* ..... 8-4

*Clamp Board* ..... 8-5

*Edge Clamp* ..... 8-6

*Main Conveyor* ..... 8-7

*Lock Lever* ..... 8-8

## 9

## Camera Section

*Multi Camera & Light Assy* ..... 9-1

*Single Camera & Light (OP)* ..... 9-2

## 10

## Controller Section

*Main Box* ..... 10-1

*Main Box (with Option)* ..... 10-2

## 11

## Exterior, etc. Section

*Monitor, etc.* ..... 11-1