

Contents

KV7 0508

1 Base Section

Base 1-1

2 Cover Section

Top Cover 2-1

Base Cover 2-2

3 Feeder Section

Feeder Holder E 3-1

Feeder Holder H 3-2

Feeder Holder B 3-3

4 Moving-axis Section

X-axis 4-1

Y-axis (SF/FNC) 4-2

5 Head Section

Head (SF) 5-1

Body Head (FNC) 5-2

Head (FNC) 5-3

6 Nozzle Section

Body ANC (SF) 6-1

Contents

Body ANC (FNC) 6-2

Nozzle Selection (ANC) 6-3

Nozzle Selection (FNC) 6-4

7 Conveyor Unit Section

Push-in 7-1

Push-Up 7-2

Locate-pin 7-3

Main stopper / Sub stopper 7-4

Clamp board Positioning 7-5

Edge clamp 7-6

Main Conveyor 7-7

8 Light Section

Front Light 8-1

Front Light (Option) 8-2

9 Control Section

Main Box 9-1

Main Box (YTF.ATS) 9-2

10 Exterior,etc. Section

Monitor, etc. 10-1

I/O Board, etc. 10-2