

# Contents

KGA 0505

<b>1</b>	<b>Base Section</b>		<b>7</b>	<b>ANC Station Section</b>	
	<i>Base</i> .....	1-1		<i>Body ANC (SF)</i> .....	7-1
<b>2</b>	<b>Cover Section</b>			<i>Body ANC (FNC)</i> .....	7-2
	<i>Top Cover</i> .....	2-1	<b>8</b>	<b>Conveyor Unit Section</b>	
	<i>Base Cover</i> .....	2-2		<i>Push-in</i> .....	8-1
<b>3</b>	<b>Feeder Section</b>			<i>Push-up</i> .....	8-2
	<i>Feeder Holder E</i> .....	3-1		<i>Locate-pin</i> .....	8-3
	<i>Feeder Holder H</i> .....	3-2		<i>Stopper</i> .....	8-4
	<i>Feeder Holder B</i> .....	3-3		<i>Clamp Board</i> .....	8-5
<b>4</b>	<b>Moving-axis Section</b>			<i>Edge Clamp</i> .....	8-6
	<i>X Axis</i> .....	4-1		<i>Main Conveyor</i> .....	8-7
	<i>Y Axis</i> .....	4-2		<i>Lock Lever</i> .....	8-8
<b>5</b>	<b>Head Section</b>		<b>9</b>	<b>Camera Section</b>	
	<i>Head (SF)</i> .....	5-1		<i>Multi Camera &amp; Light Assy</i> .....	9-1
	<i>Body Head</i> .....	5-2		<i>Single Camera &amp; Light (OP)</i> .....	9-2
	<i>Head (FNC)</i> .....	5-3	<b>10</b>	<b>Controller Section</b>	
<b>6</b>	<b>Nozzle Section</b>			<i>Main Box</i> .....	10-1
	<i>Nozzle Selection (SF)</i> .....	6-1		<i>Main Box (with Option)</i> .....	10-2
	<i>Nozzle Selection (FNC)</i> .....	6-2	<b>11</b>	<b>Exterior, etc. Section</b>	
				<i>Monitor, etc.</i> .....	11-1