

Contents

KV8-9907

1 Base Section

Base	1-1
------------	-----

2 Cover Section

Top Cover	2-1
Base Cover	2-2

3 Feeder Section

Feeder Holder E	3-1
Feeder Holder H	3-2
Feeder Holder B	3-3

4 Moving-axis Section

X-axis	4-1
Y-axis	4-2

5 Head Section

Head (ST)	5-1
Head 1 (FNC)	5-2
Head Combination	5-3

6 Nozzle Section

Nozzle Changer (ST)	6-1
Nozzle Changer (FNC)	6-2

Nozzle Selection (ANC)	6-3
------------------------------	-----

Nozzle Selection (FNC)	6-4
------------------------------	-----

7 Conveyor Unit Section

Push-in	7-1
Push-Up	7-2
Locate-pin	7-3
Main stopper / Sub stopper	7-4
Clamp board Positioning	7-5
Edge clamp	7-6
Main Conveyor	7-7

8 Light Section

Front Light	8-1
Front Light (Option)	8-2

9 Control Section

Main Box	9-1
Main Box (YTF.ATS)	9-2

10 Exterior, etc. Section

Monitor, etc	10-1
I/O Board, etc	10-2